

## start function

**to open** the pusher : unscrew  
> **never unscrew** the pusher **completely**, it is not necessary and it could damage it.



**to close** the pusher : screw  
> **never screw** your pusher **thoroughly**, it is not necessary and this could damage it.

### **start function**

(unscrewed pusher)

> press **1x** on the pusher.

### **stop function**

> press **2x** on the pusher,

(Why to press 2x : to avoid any involuntary manipulation of the pusher, especially if it is not look-screwed).

### **reset function**

(back to countdown)

> press **1x** on the pusher.