

Hour setting and calendar correction



small seconds hands

- > indicates the seconds permanently
- > low battery : the small second hand will jump from 4 to 4 sec. before the battery will be empty

> quick correction of calendar

- > pull the crown to 1st position then turn the crown
- > between 22h and 02h, the calendar cannot be set in quick mode

> time setting : pull the crown to position 2 and adjust time

- > normal correction of calendar : pull crown to position 2 and have the hands moving over 24 hours