

Advanced adjustment function : modification of the minute departure during the countdown



exemple :

During the last race, the departure was given at -9 min. Today departure will be given at -6 min. Unfortunately you forgot to set your regatta hand at -6 min. and you have clenched the countdown at -9 min. at starting time.

It is not dramatic ! You have the possibility to adjust it.

1> you have pressed the pusher A when starting shoots announces the departure

2> !!!! just after the starting shoot you discover that he countdown is set for -9 min. instead of -6 min.

3 >>> press one time on B = the regatta hand goes to -8 min.

>>> press a second time on B = the regatta hand goes to -7 min.

>>> press a third time on B = the regatta hand goes to -6 min.